 
 



# A Tour of Your Player





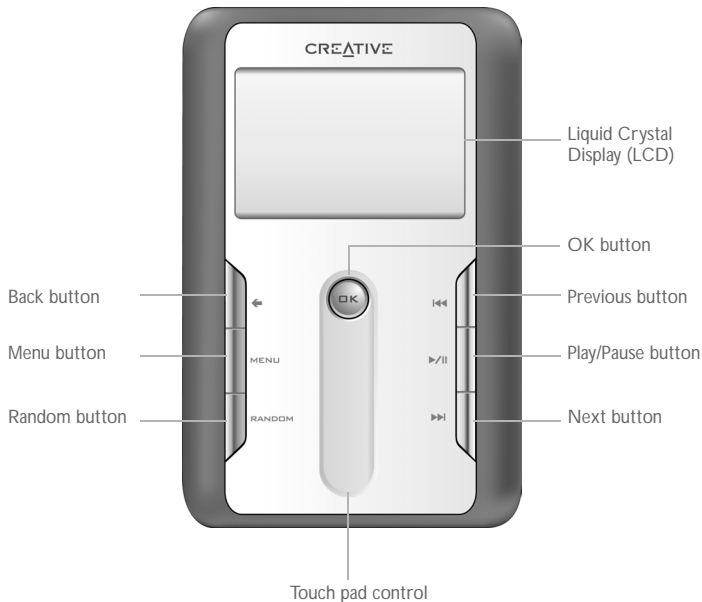

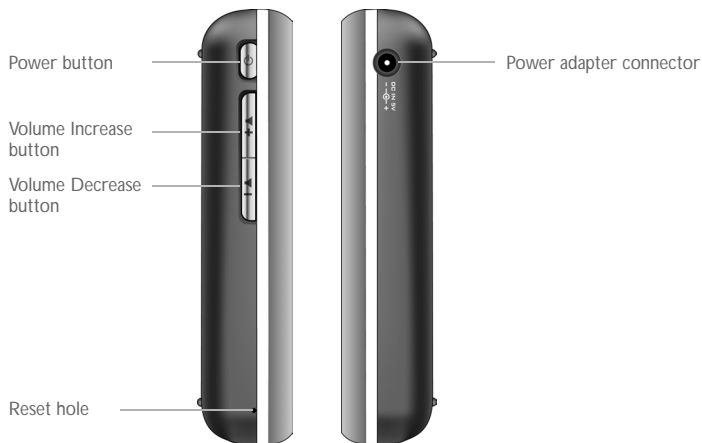 

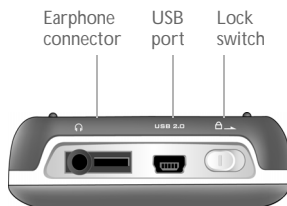Front view









Side views



Top view

Button	What It Does	Usage Tips
<p>Power button</p> 	<ul style="list-style-type: none"><li>• Turns the player on and off.</li></ul>	<ul style="list-style-type: none"><li>• To turn on your player, press and hold until the LED turns on.</li><li>• To turn off your player, press and hold until the <b>Shutting down</b> message appears. Release the <b>Power</b> button.</li></ul>
<p>Menu button</p> 	<ul style="list-style-type: none"><li>• Displays the main menu, which contains most of your player's features.</li></ul>	
<p>Previous button</p> 	<ul style="list-style-type: none"><li>• Goes to the beginning of the current track, or to the previous track.</li><li>• Moves back within a track when you press and hold the button.</li></ul>	<ul style="list-style-type: none"><li>• To go back to another track, press the <b>Menu</b> button, and then select <b>Selected Music</b>. Select the track you want to skip to.</li></ul>
<p>Next button</p> 	<ul style="list-style-type: none"><li>• Goes to the next track.</li><li>• Moves ahead within a track when you press and hold the button.</li></ul>	<ul style="list-style-type: none"><li>• To skip forward to another track, press the <b>Menu</b> button, and then select <b>Selected Music</b>. Select the track you want to skip to.</li></ul>
<p>Play/Pause button</p> 	<ul style="list-style-type: none"><li>• Starts, pauses or continues playback.</li></ul>	<ul style="list-style-type: none"><li>• To play a track from <b>Music Library</b> screens, press this button.</li></ul>
<p>Volume Increase button</p> 	<ul style="list-style-type: none"><li>• Increases the volume.</li></ul>	<ul style="list-style-type: none"><li>• Press and hold to increase the volume quickly.</li></ul>

Button	What It Does	Usage Tips
<p>Volume Decrease button</p> 	<ul style="list-style-type: none"> <li>Decreases the volume.</li> </ul>	<ul style="list-style-type: none"> <li>Press and hold to decrease the volume quickly.</li> </ul>
<p>Back button</p> 	<ul style="list-style-type: none"> <li>Goes to previously accessed screens in the menu.</li> </ul>	
<p>Random button</p> 	<ul style="list-style-type: none"> <li>Plays random tracks in your player.</li> </ul>	
<p>Touch pad control</p> 	<ul style="list-style-type: none"> <li>Scrolls up and down menus.</li> <li>Selects menu options.</li> </ul>	<ul style="list-style-type: none"> <li>For usage information, see "Using the Touch Pad Control" on page 5.</li> </ul>
<p>Lock switch</p> 	<ul style="list-style-type: none"> <li>Locks and disables all buttons on your player.</li> </ul>	<ul style="list-style-type: none"> <li>Slide the switch to the right.</li> </ul>
<p>Reset hole</p> 	<ul style="list-style-type: none"> <li>Resets your player.</li> </ul>	<ul style="list-style-type: none"> <li>Push the end of a thin object (for example, a straightened paperclip) into the <b>Reset</b> hole.</li> </ul>




# Using the Touch Pad Control

 The touch pad control is one of the most important features of your player. In this document, we will use the term, “select”, to mean that you should use the touch pad control to scroll through options, and then select the option by pressing the **OK** button.



The touch pad control



Place your finger on the middle section of the touch pad control.



Gently rub the middle section of the touch pad control to scroll through options.



Press the **OK** button to select an option.

Use the upper or lower sections of the touch pad control to scroll rapidly through options. Place your finger on the upper or lower section of the touch pad control and hold it down to scroll rapidly.



**OK** button for selecting options

Upper section for fast scrolling upwards.

Middle section for normal scrolling upwards or downwards.

Lower section for fast scrolling downwards.



- To “select”, use the touch pad control to scroll to the option you want, and select the option by pressing the **OK** button.
- When selecting an option, instead of pressing the **OK** button, you can also tap the touch pad control. The Tap to Select feature, however, must be enabled. To enable this feature, see “Playing and Managing Your Music” in your User’s Guide.

# Getting Started

## 1 Setting Up Your Player

1. Make sure that your player is **NOT** connected to your computer.
2. Insert the Zen Touch CD into your CD-ROM drive.
3. The Zen Touch CD supports Windows AutoPlay mode and starts running automatically. If not, you need to enable your CD-ROM drive's auto-insert notification feature. For more details, see "Frequently Asked Questions" in your User's Guide.

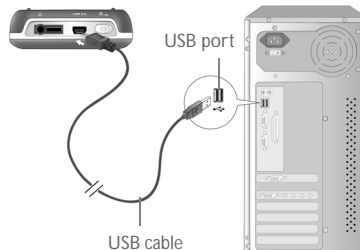 


Figure 3

4. Follow the instructions on the screen.
5. When prompted, connect your player to your computer as shown in Figure 3.



You can listen to your player's preloaded music immediately by pressing the **Play/Pause** button.

## 2 Charging the battery

The high performance lithium-ion battery supplied with your player needs to be fully charged before you use it. The battery is fully charged in approximately four hours.

### Using the power adapter

To charge your player's battery, connect one end of the power adapter to the wall outlet and the other end to your player's power adapter connector, as shown in Figure 1. Check the battery icon to see when the battery is fully charged.

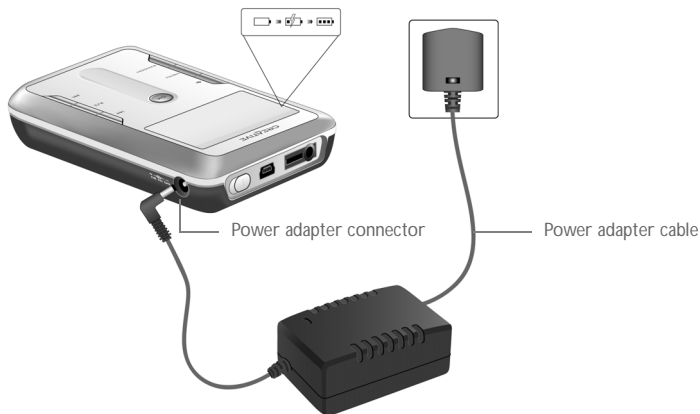




Figure 1



 
You can also charge your player's battery using the supplied USB cable. For more information, see "Getting Started" in your User's Guide.



## 3 Selecting Your Player's Menu Language

1. Turn on your player. Press and hold the **Power** button  until the LED turns on.
2. Press the **Menu** button .
3. Select **Settings**.
4. Select **Language**.
5. From the menu, select a language.

## 4 Transferring Music and Data

Audio selections have been preloaded to your player to get you started quickly. If you wish to listen to music immediately, simply press the **Play/Pause** button .

 
If you wish to download additional music tracks to your player, you can either download music tracks from Internet music sites (see "Downloading from the Internet" on page 2-6 of your User's Guide) or rip them from your audio CDs to create digital files on your computer. For more information, see "Ripping from a CD" on page 2-7 of your User's Guide.

Music files can be encoded into the supported formats (MP3, WMA or WAV file formats), and then transferred to your player with Creative MediaSource Organizer.

Data files can also be transferred to and stored in your player, for example, you can transfer a large data file from one computer to another. Data can be transferred to your player with the Creative NOMAD Explorer application.



Basic instructions on how to use Creative MediaSource and NOMAD Explorer are provided in the Creative MediaSource and NOMAD Explorer Help.








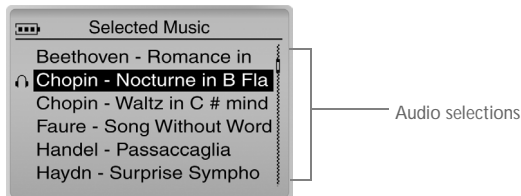 
# Playing Music

Audio selections have been preloaded to your player to get you started quickly. Your player's Selected Music list allows you to play back audio tracks.

1. Press the **Play/Pause** button .
2. The **Play** icon appears on the **Now Playing** screen, and tracks from the Selected Music list begin playing.
3. The **Now Playing** screen shows the track that is being played back or the track that has been selected.



4. To display the Selected Music list, which shows the list of tracks being played, press the **OK** button.





# About the Menu Screen

Press the **Menu** button to access the **Menu** screen (Figure 4).

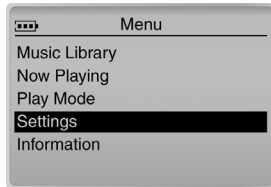 


Figure 4

## Music Library

Select this option to browse all tracks in your player or to locate a track quickly.

## Now Playing

Select this option to get to the **Now Playing** screen, which displays the current track being played back.

## Play Mode

Select this option to repeat or shuffle the tracks in your player.

 
## Settings

Select this option to get to the **Settings** screen. On this screen, you can personalize your player or enhance tracks using EQ settings.

## Information

Select this option to view your player's details, for example, version and album count.

For more information, read the User's Guide on the Installation CD.  
Go to d:\manual\<language>manual.pdf (replace d:\ with the drive letter of your CD-ROM/  
DVD-ROM drive, and <language> for the language the document is in)





# Frequently Asked Questions

## **Where can I get official information on my player?**

Visit [www.creative.com](http://www.creative.com) for updates and downloads relating to your player, Creative's MP3 players and accessories.

## **If the Selected Music list already has a few albums in it, can I repeat playback of just one album?**

Unfortunately, no. You can only choose to repeat one track, or all tracks.

## **Why does my player show me track titles starting with "B" when I'm looking for a track title starting with "A"?**

When you look for a track using the FIND feature, your player looks for the closest match. If you do not have any tracks starting with "A", the closest match can be "B".

## **My player seems to have frozen. Is there anything I can do?**

You can reset your player. Push the end of a thin object (for example, a straightened paperclip) into the **Reset** hole.

 
## **How can I get accessories for my player?**

Visit [www.creative.com](http://www.creative.com) for the latest news on accessories.

## **I have to recharge the battery quite often. Is there anything I can do to make it last longer?**

Generally, any operation requiring the player to access the hard disk uses battery power. Consequently, filling your player to capacity is not recommended. However, some operations consume more battery power:

- a long backlight timeout setting. A shorter timeout conserves battery power.
- a high contrast setting. Position the player so that you can read the display without using a high contrast setting.
- too much use of fast forward/reverse.
- turning the player on/off too many times.
- prolonged use at high volumes.



### **Can I jog with my player?**

You should not subject your player to continuous shocks, such as those that are likely to occur while you jog or run.

### **Should I leave my player plugged into the power adapter?**

No, you should not. After charging the battery or using the player, disconnect it from the power adapter. Leaving it plugged in leads to heat buildup, which is not good for the player or the battery.

### **Can I use the player for portable data storage?**

 
 
Yes, you can. However, your player is designed for storing and playing audio, not as an extra hard drive. You can use the supplied USB cable for speedy transfers to and from your player. Your player will not be recognized as a drive. Use the NOMAD Explorer application to help you manage data files.

### **If I damage or lose my power adapter, can I buy a similar, off-the-shelf adapter?**

No. The adapter may not be compatible with your player, and may even damage it. You should get a replacement adapter from Creative at [www.creative.com](http://www.creative.com), or your local Creative office/distributor.

### **Can I transfer DRM protected WMA files to my player?**

Yes. To transfer DRM protected WMA files to your player, you can use either Windows Media Player or Creative MediaSource. If you are using Nomad Explorer, **DO NOT** attempt to transfer DRM protected WMA files using the "drag & drop" or "cut & paste" method. This does not transfer the licenses that allow you to play the track.



# More Information

## Creative Knowledge Base

Resolve and troubleshoot technical queries at Creative's 24-hour self-help Knowledge Base. Go to [www.creative.com](http://www.creative.com) and select your region.

## Register your product!

Enjoy a host of benefits by registering your product during installation, or at [www.creative.com/register](http://www.creative.com/register). Benefits include:

- Service and product support from Creative
- Exclusive updates on promotions and events.

## Customer Support Services and Warranty

You can find Customer Support Services, Warranty and other information in the Installation CD.

 
Customer Support Services	d:\support\<language>\support.pdf You can also click <b>Start</b> → <b>Programs</b> → <b>Creative</b> → <b>Customer Support Services</b>
Warranty	d:\warranty\<region>\<language>\warranty.pdf Please keep your Proof of Purchase for the duration of the warranty period.
Regulatory Information	d:\fcc\<language>\doc.pdf
User's Guide	d:\manual\<language>\manual.pdf

(replace **d:\** with the drive letter of your CD-ROM/DVD-ROM drive, **<region>** with the region that you are in, and **<language>** with the language that your document is in)

Copyright © 2004 Creative Technology Ltd. All rights reserved. The Creative logo and Creative MediaSource are trademarks or registered trademarks of Creative Technology Ltd. in the United States and/or other countries. NOMAD is a registered trademark of Aonix and is used by Creative Technology Ltd. and/or its affiliates under license. Microsoft, Windows and the Windows logo are registered trademarks of Microsoft Corporation. All other products are trademarks or registered trademarks of their respective owners and are hereby recognized as such. All specifications are subject to change without prior notice. Actual contents may differ slightly from those pictured.



## Safety Advice

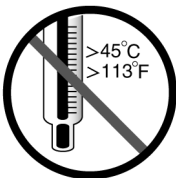

As with any digital media-based storage device, data should be backed up regularly. We strongly recommend that you observe the usage precautions laid out in this booklet, and also back up the data in your player regularly. In no event will Creative be liable for any indirect, incidental, special or consequential damages to any persons caused by Creative's negligence, or for any lost profits, lost savings, loss of use, lost revenues or lost data arising from or relating to this device, even if Creative has been advised of the possibility of such damages. In no event will Creative's liability or damages to you or any other person ever exceed the amount paid by you for the device, regardless of the form of the claim. Some countries/states do not allow the limitation or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.



